


**1. ID-Marking of packages**

Packages must be marked in accordance with the example given below (as per VDA Recommendation 4902) with the following data fields:

- MOTORTECH P/N (Part Number ; also as barcode, EAN Type 128 or Code 39, if possible/agreed)
- Name of part
- Quantity per package (minimum character size 12mm)
- Delivery destination (minimum character size: 12mm)
- MOTORTECH Order No.

For non-stackable cargo, goods with excentric center of gravity and/or in case of other special requirement (e.g. lashing) a separate, clearly visible note as per ISO780 must be attached to the package.

Example of package label:

|   |  |
|---|--|
| Part No. / Artikelnr.<br>06.73.584<br> | Quantity / Menge<br>1250<br>Packing date /Verpackungsdatum<br>12.06.2013 |
| MOTORTECH Order No. / MOTORTECH Bestellnummer<br>51712392   |  |
| Part Name / Bezeichnung<br>Rubber Cap   |  |
| Point of Delivery / Anlieferstelle<br>MOTORTECH Celle Goods Receiving   |  |


**2. Multi-package Containers**

- a) If delivery is effected using a multi-package container, separate sub-packages must be provided to accommodate the parts of one and the same material number. Such sub-packages must allow individual handling.
- b) Multi-package containers must contain only packages destined for the same delivery address.


**3. ID-Marking of sub-packages**

- a) Sub-packages must bear the following markings:
  - MOTORTECH P/N (Part Number; also as barcode, EAN Type 128 or Code 39, if possible/agreed)
  - Name of part
  - Quantity per package (minimum character size 12mm)
  - Date of packing

Example of label for sub-package / small load carrier:


|   |  |
|---|--|
| Part No. / Artikelnr.<br>06.73.584<br> | Quantity / Menge<br>1250<br>Packing date /Verpackungsdatum<br>12.06.2013 |
| Part Name / Bezeichnung<br>Rubber Cap   |  |

- b) The marking must be attached to the side of the load carrier / sub-package and must be clearly legible:

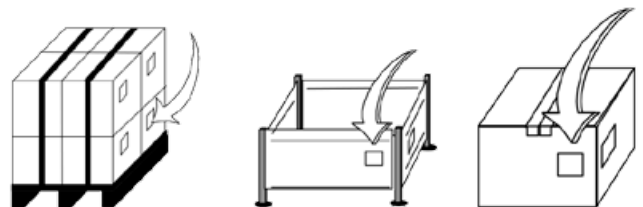

- c) If the consignment is accompanied by a test certificate and / or an initial sample test certificate(s) this/these must be adequately protected and appended to the outside of the package in a clearly visible location.
- d) An Initial Sample must be marked with an individual tag, tied to the item. The tag dimensions must not be below: length 100 mm x height 50 mm. The character size (height) of "Initial Sample" must be minimum 12 mm.

Example for Initial Sample individual tag:

|   |  |
|---|--|
| Part No. / Artikelnr.<br>06.73.584<br> | Quantity / Menge<br>1250<br>Packing date /Verpackungsdatum<br>12.06.2013 |
| MOTORTECH Order No. / MOTORTECH Bestellnummer<br>51712392   |  |
| Part Name / Bezeichnung<br>Rubber Cap   |  |
| <b>Initial Sample</b>   |  |

End of Document.